How to Play the VARSITY UME

Carnival TOY MFG. CORP.

How to tune the Carnival Varsity Ukulele

If you have a piano . . .

Tune the string to the same pitch or tone as the piano key indicated by the dotted line.



Without a piano tune as follows:



- 1. Tune the 2nd string to any low note that has a good tone.
- 2. Place the first finger behind the 4th fret of the second string . . . then tune the 3rd string to this pitch.
- Then place the first finger behind the 5th fret of the 3rd string and tune the 4th string to this pitch.
- 4. Then place the first finger behind the 3rd fret of the 3rd string and tune the 1st string to this pitch.

It is EASY to Play the Carnival Varsity Ukulele

The 3 illustrated chords below are all one needs to know to play many simple melodies. Additional Booklets containing songs and advanced instructions can be obtained at all music stores.







Chords are indicated by a pattern of dots..each dot represents the position of a finger on a string. The songs on the opposite page illustrate some of these finger patterns.



